

Installation Guide: Austroflex Firmness Adjusters



Austroflex Pod



Firmness Adjuster




Pod with Firmness Adjuster Installed



Assembly



1. Bend one 'leaf' of the pod outwards and slide one corner of the firmness adjuster into the square slot on the underside of the 'leaf'.

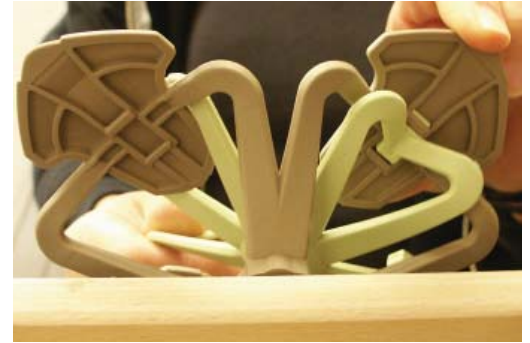

2. When correctly positioned, the square clip will snap into place.





3. Bend another 'leaf' of the pod outwards and slide the next corner of the firmness adjuster into the square slot on the underside of the 'leaf,' snapping the clip into place.



4. Repeat step 3 for the other two corners of the pod.

Tip: To remove a firmness adjuster, simply pull back each 'leaf' of the pod one by one until the adjuster is released.

Over the years, your body conditions may evolve, which may cause your bed preferences to change. The Austroflex Bed Suspension System is made to evolve along with you. Using the Austroflex Firmness Adjusters, you can map out your entire bed firmness to your preferences, and change it at any time.

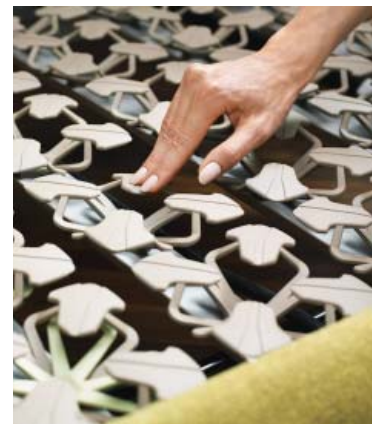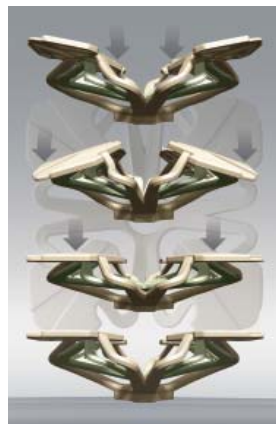

To purchase more firmness adjusters, please contact Axel Bloom Beds at: 1-800-696-8387.