




Wireless Remote Instruction

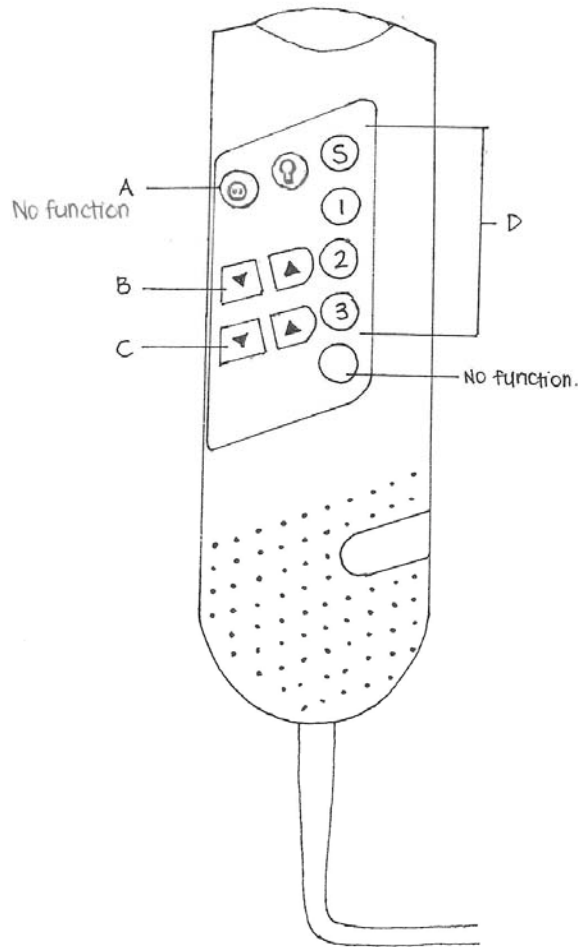

COMPONENTS

- A. NO Function
- B. Changes the head position.
- C. Changes the foot position.
- D. Memory buttons set-up.

PROGRAMMING THE MEMORY FUNCTIONS

1. Start out with the bed in a flat position.
2. Press the up and down arrow button one after the other until you've chosen a desired position.
3. Then press the program button S three times.
4. Press button 1 and a high tone will confirm the set-up.
5. To program additional positions repeat steps 2 and 3 then press buttons 2 or 3. New configurations will automatically cancel previous ones.
6. Once you've programmed your three set positions simply press and hold button 1, 2, or 3 and the bed will automatically assume the programmed configuration. Continue to press the button until the motor has stopped.